




Irritrol Systems offer a range of single barb polypropylene fittings to suit low density polyethylene tube.

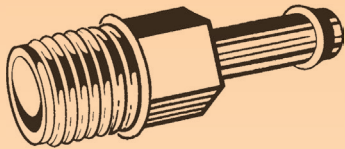


Valve Director
To connect lines to threaded fittings.
1011068: 32 mm tail × 25 mm BSP male.

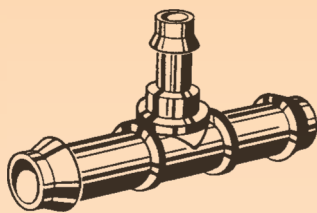


Reducing Tee
To connect a smaller line to larger lines.
1011025: 32 mm tube × 25 mm branch.

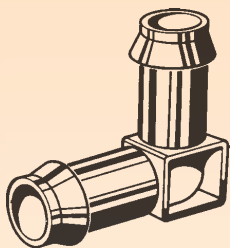


Elbow
Used to change the direction of lines.
1011070: 32 mm tube elbow.

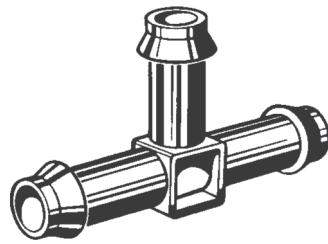


Tee
Used to connect three poly lines.
1011008: 32 mm tube × all tails.

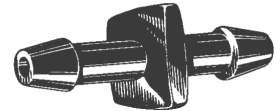


Adaptor
To connect main and feeder lines.
1011057: 5 mm × 10 mm tube barbed joiner
(use 101P4 punch).

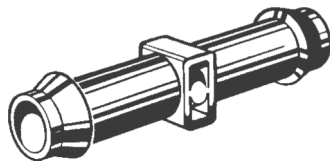


Joiner
To connect main and feeder lines.
1011042: 10 mm tube joiner.
1011044: 16 mm tube joiner.
1011056: 32 mm tube joiner.

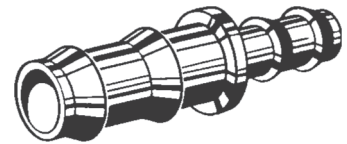


Reducing Joiner
Used to join poly feeder lines of different sizes.
1011057: 5 mm × 10 mm tube joiner
(use 101P4 punch).
1011051: 16 mm × 13 mm tube joiner.
1011052: 19 mm × 13 mm tube joiner.
1011053: 19 mm × 16 mm tube joiner.
1011072: 32 mm × 25 mm tube joiner.

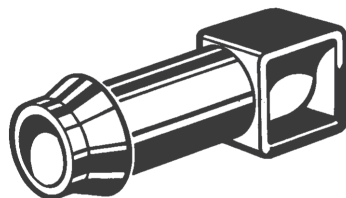


End Plug
Used to permanently seal poly lines.
1011089: 16 mm tube end stop.
1011095: 32 mm tube end stop.

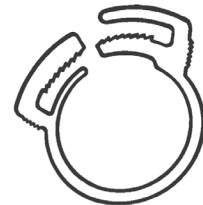

Ratchet Clamp
For securing fittings to poly lines.
1011150: Ratchet clamp × 32 mm I.D. tube.

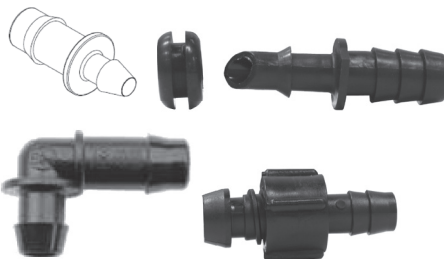

Take-offs
Used to offtake one poly tube from another.
1011160: 10 mm compression take-off.
DT0813: 8 mm × 13 mm Drip-Eze
take-off adaptor.
ET0813: 8 mm × 13 mm Elbow take-off
(suit Drip-Eze).
10146415: 10 mm × 13 mm take-off elbow.
1011170: 10 mm grommet take-off
complete (to connect 10 mm LD
poly to PVC).

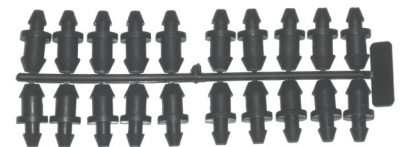

Repair Plug
For repairing wrongly punched holes.
FPG02: 5 mm and 8 mm Goof Plug
- suit replacement work.